



Avaya 9608/9608G/9611G/9621G/9641G IP Deskphones Button Icons

Icon	Name	Function
	Navigation	<p>Press the left, up, right, and down Navigation buttons to move between and select screens and options.</p> <p>Press the center OK button to submit the selection.</p> <p>Note: These buttons are available only on the 9608, 9608G, and 9611G.</p>
	Message	<p>When you receive a voicemail, the phone illuminates the Message button.</p> <p>Press Message to listen to your voicemails.</p>
	Phone	<p>Press Phone to view the Phone screen.</p> <p>During a call, you can gain access to the following options from the Phone screen: Hold, Conference, Transfer, and End call.</p>
	Contacts	<p>Press Contacts to view the entries in your contact list.</p>
	Home	<p>Press Home to configure options and settings, and or any applications available to you, log out, or view network information.</p>
	History	<p>Press History to view the history of your outgoing, incoming, and missed calls. The deskphone illuminates the button when you have missed calls.</p> <p>The top line shows the Missed Call icon and the number of calls that you have missed.</p>
	Headset	<p>Press the Headset button to use the headset if connected.</p> <p>Note: Only HIS headset cords are compatible with your phone.</p>
	Speaker	<p>Press the Speaker button to use the speakerphone.</p> <p>To take a call off the speakerphone, lift the handset or press the Headset button.</p>
	Volume	<p>While on an active call, press + or - on the Volume button to adjust the volume of your handset, headset, or speaker.</p> <p>While you are not on an active call, press Volume to adjust the ringer volume.</p>
	Mute	<p>Press the Mute button to mute a call in progress.</p> <p>To take a call off mute, press Mute again.</p>
	Forward	<p>Press the Forward button to enable call forwarding features such as Send all calls to a pre-specified number. To disable, press Forward again.</p> <p>Note: This button is available only on the 9621G and 9641G.</p>